

**AUGUST<sup>®</sup>**

**User Manual**

# **Digital Photo Frame**

**August International Ltd**

**United Kingdom**

**Telephone: +44 (0) 845 250 0586**

**[www.augustint.com](http://www.augustint.com)**

# User Manual

## 1. Introduction

This 1.5", key ring, digital photo frame is ideal for travellers. Take pictures of your loved ones with you wherever you go. It can be used as a key ring or pendant. Pictures are easily loaded and the battery recharged using a computers USB port.

## 2. Specifications

- 128x128 resolution display
- Slideshow and individual picture playback
- Analogue or digital clock with date
- Built in rechargeable battery
- Supports JPEG, GIF, BMP and TIFF files
- USB charging
- Adjustable auto-power off

## 3. Getting started

To charge your device and add pictures, you will need to connect it to your computer, just follow the simple steps below:

### 3.1 Charging and transferring pictures

- 1) Connect the photo-frame to your PC or Laptop using the

-1-

supplied USB cable. This will begin the charging process automatically.

- 2) Press the menu button on the back to bring up the control panel.
- 3) Using the up and down arrow buttons choose 'USB CONNECTED' and press the menu button again to select it.
- 4) At this point your computer will tell you that it has found a new device and the picture-management software will pop up on your screen.

### 3.2 Using the Software

#### 3.2.1 To add a picture:

- 1) Use the browser window in the top left hand corner to navigate to the picture you'd like to add to the device.
- 2) It will appear in the bottom left window, drag the "broken lined" box to choose which part of the picture you'd like to add to the device, then use rotate left and right as needed.
- 3) Once you are happy with the image inside the box, press the ADD button to add to the preview album.
- 4) Repeat steps 1 to 3 until you have all the pictures that you would like to add in the preview album, then press the DOWNLOAD button in the top right to synchronise.

-2-

### **3.2.2 To delete a picture:**

- 1) The window on the right hand side shows you all the pictures currently loaded onto your device, click on the picture you want to remove.
- 2) Press the Delete button in the top right hand corner to delete the selected picture.

### **3.2.3 To transfer a picture from the device to your PC:**

- 1) The window on the right hand side shows you all the pictures currently loaded onto your device, click on the picture you want to transfer.
  - 2) Press the Save button in the top right hand corner to save it onto your computer.
- N.B. To transfer all pictures swiftly over to a PC you can use the Save All button in the top right hand corner.

### **4. Slideshow and browsing pictures**

Once you've loaded up with pictures you'll be able to share them with friends using the slideshow feature:

- 1) Press the menu button on the back of the device to bring up the control panel.
- 2) Using the up and down arrow buttons choose 'SLIDESHOW' and press the menu button again to select it.
- 3) From the next screen select ON, you will then be able to use the up and down arrow buttons to choose the length

(in seconds) each picture is displayed for. Press the menu button again, when you are happy with the time showing, to start the show.

- 4) To stop the show, go back to the SLIDESHOW menu and select OFF.

You can also view your pictures simply by pressing the up and down arrow buttons to browse through them.

### **5. Clock Function**

#### **5.1 To switch from showing pictures to showing the time and date:**

- 1) Press the menu button and use the arrow keys to choose CLOCK and the menu key again to select it.
- 2) a) Then choose and select DISPLAY CLOCK to view the time and date in a digital format.  
b) Then choose and select ANALOG CLOCK to view a traditional clock face.

#### **5.2 To change the time and date settings:**

- 1) Press the menu button and use the arrow keys to choose SET CLOCK and the menu key again to select it.
- 2) Pressing the menu again will toggle you through the settings and you can use the up and down arrow keys to set the correct details.

## **6. Auto Shutdown**

The device turns itself off after a while in order to save batteries, you can change the amount of time before shutdown:

- 1) Press the menu button and use the arrow keys to select AUTO SHUT DOWN.
- 2) Use the arrow keys to select the desired amount of time before shutdown (in minutes) and then press the menu button to confirm.

## **7. Brightness**

The brightness of the frames display can be changed using the backlight menu option.

- 1) Press the menu button and use the arrow keys to choose BACKLIGHT.
- 2) Using the up and down arrow keys select the brightness (between 1-21) and press the menu button to confirm.

## **8. Deleting pictures**

Without using a computer, you can delete pictures either individually or all at once, in order to delete an individual picture:

- 1) Scroll through your pictures until the one which you wish to remove from the device is showing.

- 2) Press the menu button to access the control menu.

- 3) Use the up and down arrow keys to choose delete and then press the menu button to select it.

- 4) From the sub-menu use the up and down arrow keys to choose DELETE ONE then the menu button to select it.

- 5) From the next screen use the up and down arrow keys to choose YES (if you are sure) and then press the menu button to complete the deletion.

## **9. Power**

To turn the device off:

Press and hold the menu button, it will show "power off" and then switch off.

Or press the menu button and use the up and down arrow buttons to choose OFF then press the menu button to select it.