

AUGUST[®] User Manual

**Wireless Presentation Laser Pointer with Mouse
Pointeur laser de présentation avec souris
Wireless Presenter mit Laserpointer und Maus
(LP105R)**

Be sure to carefully read this user manual for proper guidance and keep for future reference.

Veuillez lire attentivement le mode d'emploi pour une bonne utilisation et conserver pour référence ultérieure

Um das Gerät richtig zu bedienen, lesen Sie diese Anleitung bitte sorgfältig durch.

August International Ltd

United Kingdom

Telephone: +44 (0) 845 250 0586

Email: service@augustint.com

Web: www.augustint.com

Contents

1. Introduction	2
2. Operating System	2
3. Parts & Functions	2
4. Battery Installation	4
5. Technical Parameters	5

1. Introduction

The wireless presenter is suitable for any presentation or PowerPoint occasion. With it, you don't need to stand beside your computer or have an assistant. It is very simple to use, just plug and play, and no driver is required.

The device enables you to control your presentation wirelessly up to 10 metres (32 feet) away, thanks to the advanced radio frequency (RF) technology that works through walls.

It combines the functions of a laser pointer, remote control, wireless mouse, and portable storage device (optional). It is tailored as a convenient tool for presentations, teaching, meetings, speeches and training.


2. Operating System

The device supports Windows 98 / ME / 2000 / 2003 / XP / Vista / 7, Linux and Mac OS

3. Parts & Functions


3.1 Wireless Presenter

1) Presenter Mode:

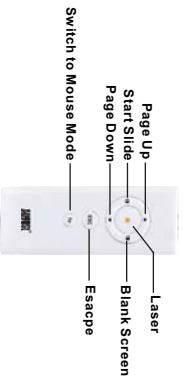

▲	Page Up
▼	Page Down
▣	Start Slide (For PowerPoint only)
□	Blank Screen (For PowerPoint only)
*	Laser
ESC	Escape
Fn	Switch to Mouse Mode

2) Mouse Mode:

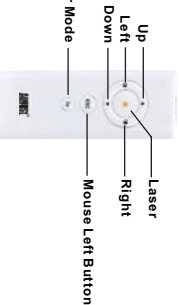

▲	Move Cursor Up
▼	Move Cursor Down
▣	Move Cursor to Left
□	Move Cursor to Right
*	Laser
ESC	Left Button of the Mouse
Fn	Switch to Presenter Mode

Attention:

(1) Press & hold the direction keys for less than 1 second, the cursor will move at a lower speed, ideal for pinpoint.

(2) Press & hold the direction keys for over 1 second, the cursor will move at a higher speed, ideal for quick locating.

3.2 USB Receiver



4. Battery Installation

The remote is powered by 1x CR2032 battery. Push and remove the battery compartment cover. Insert 1x CR2032 battery into the battery holder with the negative side facing the bottom. Put the battery compartment cover back into position.

Note

- 1) Do not insert battery into the device in the wrong direction.
- 2) Do not leave bad or exhausted battery in the device
- 3) If you do not use the device for a long period of time, remove the battery to avoid possible damage from battery corrosion.
- 4) If the device does not function correctly or if the operating range becomes reduced, try to replace the battery with new one.

5. Technical Parameters

Transmitter

Control distance	10 meters/ 32 feet
Battery	1 x CR2032
Working voltage	3V
Sleep current	1uA
Output Power	0dB
Laser Power	< 5mW
Wave length	630-680nm
Frequency	2.402GHz
Wireless method	RF
Dimension	34x88x8 mm
Weight	17g

Receiver

Operation system	Windows 98 / ME / 2000 / 2003 / XP / Vista / 7 , Linux and Mac OS
USB version	USB1.1 Compatible USB2.0
Working voltage	USB electricity supply (4.5-5.5V)
Frequency	2.402GHz
Wireless method	RF
Dimension	33x65x8 mm
Weight	11g

Caution

Please note that laser radiation is harmful to the eye. Do not look directly into the aperture while the laser in operation!
Laser pointers can be harmful if used improperly. Please keep out of reach of children!