

August[®] User Manual

Mini MP3 Music Box and Speakers

August International Ltd
United Kingdom
Tel: +44 (0) 845 250 0586
www.augustint.com

— **MB600** —

User Manual

Thank you for purchasing the August MB600 Mini MP3 Music Box and Speakers. This user manual will quickly familiarise you with all the features of your new device. To make the most of your purchase, please do take the time to read through this manual carefully, even if you have used similar products before.

Safety

To ensure your safety and the safety of others, please familiarise yourself with the Safety Instructions on page 2, before beginning to use this device.

Do not attempt to open the MB600, it is unsafe to do so and will also invalidate the warranty.

Disposal






Please ensure that this device is disposed of in accordance with the WEEE (Waste Electrical and Electronic Equipment) Directive and/or any further regulations that are applicable to your country. In order to find out the current regulations specific to your location please contact your local environment agency.

Customer Service

You can contact us on: +44 (0) 845 250 0586 or by email at: service@augustint.com, should you require any further technical support with this product or to talk to our customer service team.

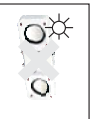1. Safety Instructions

■ Storage and Use

	Keep the device away from extreme temperatures.
	Never expose the device to moisture, dust, oil or smoke.
	Avoid dropping or exposing to impacts.
	When carrying this device as part of your luggage please ensure it is securely stored to avoid impact damage.
	Never strike or scratch this device with any sharp object.

■ Maintenance

Please unplug all leads before cleaning this device.

	Wipe the device and buttons with a soft cloth.
	Never wipe this device with an abrasive cloth or use detergents, alcohol or chemical based cleaning products.


2. Main Features

- Mini MP3 player and speakers
- High quality stereo sound output
- Foldable for easy transport
- Integrated SD/MMC card reader & USB port
- Standard 3.5mm audio-in socket
- Built-in rechargeable battery
- Battery playtime: up to 3 hours
- Power output: 6 W

3. Accessories



4. Parts & Functions

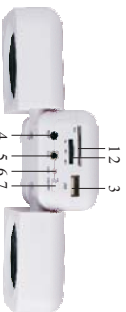

1. SD/MMC Card Reader
2. Function Key
3. USB Port
4. Charging Socket
5. 3.5mm Audio In
6. LED Power Indicator
7. Power Switch

5. Charging Your Device

In order to charge your device, connect the supplied USB Cable from the charging socket to a computer's USB port. A full charge will take approximately 2 hours and gives up to 3 hours playback.

6. Playing Music

6.1 Via 3.5mm Audio-In

To play music through the device's speakers, use the supplied 3.5mm Audio Cable to connect from the headphone socket of your audio player, such as a mobile phone or MP3 player, to the device's Audio In socket, then slide the power switch to 'ON'. Provided Music is playing on your MP3 player, you will now be able to hear it through the speakers. The LED power indicator will light red when the Audio-in socket is in use.

6.2 Via USB Port

To play music from a USB memory stick, insert the memory stick into the device's USB port, then slide the power switch to on, provided there are MP3 files saved on the memory stick, you will now be able to hear them playing through the speakers.

During music playback, the LED power indicator will flash green, press the Function key towards **▶/▶**, it will skip back to the previous track, press and hold the Function key towards **◀/◀** to reduce the volume, press the Function key towards **▶/▶**, to skip to the next track, press and hold the Function key towards **▶/▶** to increase the volume, press the Function key down to pause playback, press again to resume.

6.3 Via SD Card Reader

To play music from a SD memory card, insert the memory card into the device's card reader, then slide the power switch to on, provided there are MP3 files saved on the

memory card, you will now be able to hear them playing through the speakers.

During music playback, the LED power indicator will flash green, press Function key towards \blacktriangleleft , it will go to the previous track, press and hold Function key towards \blacktriangleleft to reduce the volume, press Function key towards \blacktriangleright , it will go to the next track, press and hold Function key towards \blacktriangleright to increase the volume, press Function key to pause the playback, press again to resume.

7. Using the MP3 Player Cradle

Step 1: To use the cradle, simply slide it backwards out of the device.

Step 2: Fully open the speakers.



Step 3: Slide the cradle into the front of the device.

8. Specifications

Speaker	2 x 3. Watts diameter 2 inches
Power Input	5V
Audio Input	3.5mm audio in
Card Reader	SD/MMC card up to 2 GB
USB Port	USB memory stick up to 4 GB
Music Format	MP3
Battery Capacity	600 mAh
Battery Charging Time	2 hours
Battery Life	Up to 3 hours
Noise Ratio	≥ 80 dB
AMP frequency range	150Hz - 18KHz
Dimensions	191 x 65 x 65 mm 110 x 65 x 65 mm (Folded)
Net weight	190g