

Quick Start Guide

August 10.4" Digital & Analogue LCD TV with DVD Player (DA104CD)

1. It is suggested that you use a roof top aerial when scanning TV channels for the first time, if any signal can be detected, the channel information will be saved on the TV, you may then swap back to the portable antenna supplied and change your location to find the best place to receive the signal.
2. Press "DVD/DVB" on the remote to switch to "DVB (Freeview TV)" mode, it will ask you to do the "First Time Installation", follow the instructions to select "Country" and start "Auto Scan". Once the scan has finished, press "CH+", "CH-" or "EPG" to select channels.
3. Press "TV" on the remote to switch to "ATV (Analogue TV)" mode, "PAL" (UK TV format) will show on the top right corner of the screen. Press "Menu" twice to go to "Auto Search", press ARROW RIGHT to start the scan. Once the scan has finished, press "CH+" or "CH-" to select channels.
4. If you have done the first time installation before, and would like to search Digital Freeview channels again, press "DVD/DVB" on the remote to switch to "DVB (Freeview TV)" mode, then press "Setup", press ARROW DOWN to move to "Installation", press ARROW RIGHT to move to "Auto Scan", press "Enter", press ARROW LEFT or RIGHT to select the correct "Country", press ARROW DOWN to move to "Start Scan", then press "Enter" to start. Once the scan has finished, press "CH+", "CH-" or "EPG" to select channels.
5. To play a DVD or CD disc, insert the disc to the DVD loader, press "DVD/DVB" on the remote to switch to "DVD" mode, press "Play" or wait for the player to load the disc automatically.
6. To play music, photos or video files on a SD card or memory stick, insert the SD card or memory stick to the card slot or USB port, press "DVD/DVB" on the remote to switch to "DVD" mode, press ARROW LEFT or RIGHT to switch over between the "Audio", "Photo", "Video" folder or "Sub track", press ARROW UP or DOWN to select the file you want to play, press "Enter" or "Play" to start playing.
7. If your TV model has built-in battery, there are power TV sockets on both sides of the TV, the side with "CHG" is for charging battery only, when connected with power adapter, the red light "CHG" will be on, which means that it is charging. The power socket on the other side of the TV is for watching TV only.
8. Please note the included portable antenna may only be used in areas where Freeview signal is very strong. There may be difficulties in receiving TV signal with the portable antenna in some regions at present, this is due to the fact that Freeview service (www.freeview.co.uk) is yet to operate in full power in the UK. The government aims to achieve a full switchover by 2012, which will occur in stages, region by region between 2008 and 2012, at present the quality of the Freeview reception varies in different regions across the UK.

As mentioned on Freeview website, only 73% of the UK population are able to receive Freeview at present and only small number of households might be able to use a set top aerial at present. This only applies if you live in an area with coverage close to a transmitter, but reception would still be unreliable and they strongly recommend that you use a roof top aerial for good reception, please refer to: <http://www.freeview.co.uk/help/reception-viewing/q7>

The reception will be improving along with the progress of the Digital Switchover Program. Reception capability may also be affected by various factors such as how close you are to Freeview TV / digital radio transmitters, tall buildings, thick walls, ceilings and weather etc.

9. For any further queries, please telephone August International Ltd helpline 0870 850 3525 or email service@augustint.com