

Quick Start Guide

August 7" Digital & Analogue TV/Media Player (DA700B)

1. It is suggested that you use a roof top aerial when scanning for TV channels for the first time, if any signal is detected, the channel information will be saved on the TV, you may then switch back to the portable antenna supplied and change your location to find the best place to receive the signal.

2. The TV/AV button on the TV or MODE on the remote is for switching between 3 modes: Analogue TV, Digital Freeview TV & Media Player and AV Input.

3. When turning on the device for the first time, "Initial Install" will show, follow the instructions to select OSD Language and Area, then press ENTER, it will ask whether to install, select YES, the auto search will then start. Once the search has finished, press CH+, CH- or EPG to select channels. Press REV/RADIO to switch between Freeview TV and Radio channels.

4. If you have done the first time installation before, and would like to search for Digital Freeview channels again, or if you have moved to a different region and need to scan channels again, press TV/AV on the TV or MODE on the remote to switch to Digital TV & Media Player mode, press MENU, select "Digital TV" by pressing ENTER, select "Installation", then select "Auto Search", press ENTER to start the search. Once the search has finished, press CH+, CH- or EPG to select channels. Press REV/RADIO to switch between Freeview TV and Radio channels.

5. To search for Analogue TV, press TV/AV on the TV or MODE on the remote to switch to Analogue TV mode and you should see either "AUTO", "PAL" or "SECAM" at the top right corner of the screen. Press MENU repeatedly, it gives you menu "PICTURE", "VOLUME", "OPTION", "SYSTEM", "PRESET", and "CLOCK" respectively. To start the auto search, move to "PRESET" menu and "AUTO SEARCH" is selected, press ARROW RIGHT to start search for channels.

6 To play video, music, or photos on a SD card or memory stick, insert the SD card or memory stick to the card slot or USB port, press TV/AV on the TV or MODE on the remote to switch to Digital TV & Media Player mode, press MENU to select "Movie", "Music", or "Photo", press ENTER or PLAY to start playing, press EXIT to stop and exit to main menu. During the photo playback, press UP for the mirror effect, press again to back to normal, press DOWN for upside down effect, press again to back to normal, press RIGHT to rotate clockwise, press LEFT to rotate anticlockwise, press ENTER for photo slideshow, photos in the selected folder will show repeatedly.

7. Please note the included portable antenna may only be used in areas where signal is very strong. There may be difficulties in receiving signal with the portable antenna in some regions at present, this is due to the fact that Freeview (www.freeview.co.uk) is yet to operate in full power in the UK. The government aims to achieve a full switchover by 2012, which will occur in stages, region by region between 2008 and 2012, at present the quality of Freeview reception varies in different regions across the UK.

As mentioned on the Freeview website, only 73% of the UK population is able to receive Freeview at present and only a small number of households might be able to use a set top aerial at present. This only applies if you live in an area with coverage close to a transmitter, but reception would still be unreliable and they strongly recommend that you use a roof top aerial for good reception.

The reception will be improving along with the progress of the Digital Switchover Program. Reception may also be affected by various factors such as how close you are to transmitters, tall buildings, thick walls, ceilings and weather etc.

8. For any further queries, please telephone August International Ltd helpline 0870 850 3525 or email service@augustint.com