

Daffodil®

User Manual

LEC600



Digital Daffodil Ltd
Rawmec Business Park
Hoddesdon EN11 0EE
United Kingdom
Tel: +44(0) 845 293 9658

EU Distributor:
Daffodil Germany GmbH
Bayernstr. 10
D-30855 Langenhagen
Germany
Tel: +49 (0) 511 97812977

www.digitaldaffodil.com

- EN** Portable LED Torch with 3600mAh USB Powerbank
- FR** Lampe de poche LED portable avec batterie USB de 3600 mAh
- DE** Tragbare LED-Taschenlampe mit 3600mAh USB-Powerbank
- IT** Torcia LED portatile con batteria USB da 3600 mAh
- ES** Linterna LED portátil con batería USB de 3600 mAh
- PL** Przenośna latarka LED z powerbankiem USB 3600 mAh
- JP** ポータブルLEDライト&モバイルバッテリー機能搭載

1. Box Contents



LEC600



Power Cable




User Manual

2. Main Features

- 100 Lumen Lamp with 2 Emergency SOS Light Modes
- 6 Hour Battery Life from 3600mAh Battery
- IPX6 Water Resistance Level
- Use Handheld or Hands-Free with Clip

3. Part Names and Functions

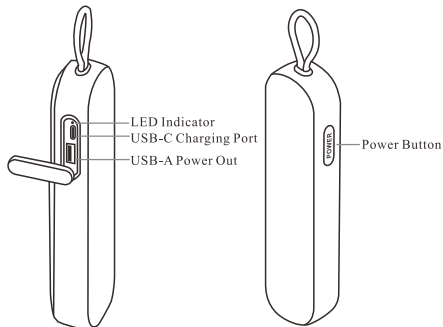

4. Operation

4.1 Charging

Please fully charge the LEC600 before first use or if left unused for a long period of time.

Open the silicone cover, plug the USB-C power cable in to the USB-C charging port to connect a 5V power supply. The LED indicator light flashes in red while charging.

When the device is fully charged, the LED indicator will turn off.

When the device battery level is low, the LED indicator will flash in green.

Note: If the device is not used for a long period of time, it should be charged every 2 months for at least 2 hours, otherwise the battery life will be shortened.

4.2 Changing Light Modes

Lighting modes can be changed by pressing the POWER button. The light will cycle between modes in the following order -Torch / Lamp - SOS - Flash - Off.

4.2.1 Torch / Lamp Mode (White Light)

Press the power button to turn on the white light.

When the white light is on, press and hold the power button to dim the white light, then press and hold the power button to brighten the white light.

4.2.2 SOS Mode (Red Light)

Press the power button while in Torch / Lamp mode to switch the unit to the red SOS mode.

4.2.3 Flash Mode (Red Light)

Press the power button while in SOS Mode to switch the unit to the red light flash mode.

4.2.4 Off (No Light)

Press the power button while in Flash mode to turn the light off.

4.2.5 Power Bank

The LEC600 can be used as a power bank to charge another device. Please plug the charging cable into the USB-A power out port to start charging, the LED indicator will light green.

4.3 Safe Operation

To ensure the safe operation of your charging unit and torch, please abide by the following:

1. Do not submerge the unit or subject it to constant rain.
2. Ensure charging cables used for the power bank are rated at least 2A.
3. Avoid direct eye-contact at close proximity with the torch.
4. Insert the silicone port-protector whenever possible and do not remove it with excessive force.

5. Specification

USB Input	DC 5V/1A
Lighting Power	2W
USB Output	DC 5V/1A
Light Source	LED
Maximum Illuminance	800LUX
Maximum Luminous flux	100 lumen
Colour Temperature	5700K
Charging Time	Up to 4.5 hours
Battery Life	6 hours for white light 2 hours for USB charging 1.5 hours for USB charging + white light
Waterproof Level	IPX6

6. Warranty

This product is guaranteed for twelve months from the date of the original purchase. In the unlikely event of any defect arising due to faulty materials or workmanship, the unit will be either replaced or repaired free of charge (where possible) during this period. An alternative product will be offered in case the product is no longer available or repairable.

This warranty is subject to the following conditions:

- The warranty is only valid within the country where the product is purchased.
- The product must be correctly installed and operated in accordance to the instructions given in this user manual.
- The product must be used solely for domestic purposes.
- The warranty only covers the main unit, and does not cover the accessories.
- The warranty does not cover the damage caused by misuse, negligence, accident and natural disaster.
- The warranty will be rendered invalid if the product is resold or has been damaged by inexpert repairs. The manufactures disclaim any liability for incidental or consequential damages.
- Please consult our customer adviser before returning any product; we are not responsible for any unexpected product returns.
- Any faulty product must be kept and returned in the original packaging with all the accessories and the original copy of the purchase receipt.

The warranty is in addition to, and does not diminish, your statutory or legal rights.

Customer Service:

Telephone: +44(0) 845 293 9358

Email: service@digitaldaffodil.com