

AUGUST®

User Manual

MS430



August International Ltd
United Kingdom
Tel: +44 (0) 845 250 0586
www.augustint.com

- EN Wireless Bluetooth Waterproof Speaker
- FR Haut-Parleur Sans-Fils Bluetooth Résistant à l'Eau
- DE Schnurloser wasserfester Bluetooth Lautsprecher
- IT Altoparlante Senza Fili Bluetooth Impermeabile
- ES Altavoz Inalámbrico Bluetooth Resistente al Agua

User Manual

Thank you for purchasing the August MS430. This user manual is designed to familiarize you with all the features of this device. Please take the time to read this user manual carefully, even if you are already familiar with a similar product.

Safety

To ensure the safety of yourself and others, please read the Safety Instructions before using this device. Please do not disassemble this product as it can be unsafe and will invalidate the manufacturer's warranty.

Disposal

Please ensure the product and accessories are disposed of in compliance with the WEEE (Waste Electrical and Electronic Equipment) Directive and any other regulations applicable to your country. Always check with the environment agency and any other relevant authorities for current disposal regulations.

Declaration of Conformity


 



The Declaration of Conformity can be found on our website at <http://augustint.com/en/declaration/>

Customer Service

You can contact: +44 (0) 845 250 0586 or email service@augustint.com should you require technical support and customer service.

1. Safety Instructions

■ Storage and Use

	Do not store or use this device in extreme temperatures.		Do not drop or strike this device.
	Do not expose this device to dust, oil or smoke.		Do not scratch this device with sharp objects.
	When transporting this device, store securely to avoid impact damage.		

Warning:

MS430 is an IPX5 waterproof device. Do not immerse the device in water. While in wet conditions, do not press any buttons or use any connections on the device as doing so may damage its water resistance.

■ Maintenance

Please unplug all leads before cleaning this device.



Wipe the device and buttons with a soft cloth.



Never wipe this device with an abrasive cloth or apply detergent, alcohol or chemical based cleaning products.

2. Main Features

- Wireless Speaker for Bluetooth devices
- Standard 3.5mm Audio-In Socket
- Hands-free Calls with Microphone
- Built-in Rechargeable Battery
- Waterproof (IPX5)
- Bluetooth Version: v4.2

3. Box Contents



MS430



Charging Cable



3.5mm Audio Cable



Suction Cup



User Manual

 
 
4. Part Names and Functions



1. Multifunction Dial

Power / Play / Pause /
Volume Control /
Answer /
Last Number Re-dial

2. Status LED



3. Power Socket

4. 3.5mm Audio Socket

5. Operation

Please fully charge the MS430 before first use or if left unused for a long period of time.

To charge, use the power cable to connect the speaker to a powered USB port.

While charging, the status LED will light red. It will turn off when fully charged.

5.1 Switch On / Off

To switch on the MS430, press and hold the Multifunction Dial for 2 seconds.

5.2 Bluetooth Connection

When switched on, the MS430 will enter reconnection mode and will automatically connect to any previously known device. If no such device is found, it will enter pairing mode and the status LED will flash blue quickly.

To clear all previously known devices, turn off the MS430, then press and hold the Multifunction Dial for 10 seconds.

■ For mobile phones and tablets

1. Scan for available Bluetooth devices on your mobile phone or tablet.
2. Select 'MS430' from the available devices and confirm the connection. If a pin code is requested, please enter the code '0000'.
3. Once successfully paired, the status LED will flash blue slowly.

■ For computers

1. Enable the Bluetooth function on your computer.
2. Select 'Devices and Printers' from the Control Panel and click 'Add a Device'.
3. Select 'MS430' from the available devices. The driver will be installed automatically. If a pin code is requested, please enter the code '0000'.
4. Once successfully paired, the status LED will flash blue slowly.

5.3 Line-In

Plug the 3.5mm audio cable into the audio socket. The MS430 will enter line-in mode automatically. In line-in mode, the status LED will light blue.

Unplugging the audio cable will automatically return the MS430 to Bluetooth mode.

5.4 Multifunction Dial

To switch on the MS430, press and hold the Multifunction Dial for 2 seconds.

Operation	Function
Press	Play / Pause; Pick up / Hang up a call; Mute / Unmute (line-in mode)
Press and hold	Power on / off
Double Press	Last Number Re-dial
Turn	Volume Control

6. Charging

To charge the MS430, connect it to a powered USB port using the USB charging cable provided. While charging, the status LED will light red. It will turn off once the battery is fully charged. A full charge will take approximately 3 hours depending on the power input.

7. Specification

Bluetooth Version	v4.2
Bluetooth Profiles	A2DP, AVRCP, HSP, HFP
Transmission Frequency	2.402G~2.480G
Operating Range	10m
Speaker Output	3W
Frequency Response	140Hz~20kHz
Signal and Noise Ratio SNR	≥75dB
Distortion	≤1.0%
Battery	3.7V/2500mAh Built-in Lithium Battery
Working Time	About 11 Hours
Standby Time	150 Days
Charging Time	About 3 Hours
Dimensions	100×75×65mm
Net Weight	220g

8. Troubleshooting

Problem	Solution
Won't turn on	Please ensure that the MS430 is charged.
Can't find the MS430	Confirm that the MS430 is in pairing mode and within 10 meters of the device.
Can't install the driver for MS430 on a computer	Update the driver of the Bluetooth module on your computer.
No sound	Check the volume on both the source device and the MS430.
The sound quality is intermittent in Bluetooth mode.	<ul style="list-style-type: none">● Disable the Wi-Fi on your source device.● Move the MS430 away from any other wireless devices.

9. Warranty

This product is guaranteed for twelve months from the date of the original purchase. In the unlikely event of any defect arising due to faulty materials or workmanship, the unit will be either replaced or repaired free of charge (where possible) during this period. An alternative product will be offered in case the product is no longer available or repairable.

This warranty is subject to the following conditions:

- The warranty is only valid within the country where the product is purchased.
- The product must be correctly installed and operated in accordance to the instructions given in this user manual.
- The product must be used solely for domestic purposes.
- The warranty only covers the main unit, and does not cover the accessories.
- The warranty does not cover the damage caused by misuse, negligence, accident and natural disaster.
- The warranty will be rendered invalid if the product is resold or has been damaged by inexperienced repairs. The manufacturer disclaims any liability for incidental or consequential damages.
- Please consult our customer adviser before returning any product; we are not responsible for any unexpected product returns.
- Any faulty product must be kept and returned in the original packaging with all the accessories and the original copy of the purchase receipt.

The warranty is in addition to, and does not diminish, your statutory or legal rights.

Customer Service:

Telephone: +44 (0) 845 250 0586

Email: service@augustint.com

This product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The Declaration of conformity may be consulted online at <http://www.augustint.com/en/declaration>.

