

AUGUST®

User Manual

SE20



EN

Mini Bluetooth Stereo System

FR

Mini Système Stéréo Bluetooth

DE

Mini Bluetooth Stereoanlage

IT

Mini Sistema Stereo Bluetooth

ES

Mini Radio Estéreo Bluetooth

August International Ltd

Rawmec Business Park
Hoddesdon EN11 0EE

United Kingdom

T: +44 (0) 845 250 0586

(Carrier Rates Apply)

E: service@augustint.com

EU Distributor:

Daffodil Germany GmbH

Bayernstr. 10

D-30855 Langenhagen

Germany

T: +49 (0) 511 97812978

www.augustint.com

User Manual

Thank you for purchasing the August SE20 Bluetooth Boombox with FM Radio. This user manual is designed to familiarize you with all the features of this device. Please take the time to read this user manual carefully, even if you are already familiar with a similar product.

Safety

To ensure the safety of you and others, please read the Safety Instructions before using this device.

Please do not disassemble the SE20, it can be unsafe and will invalidate the manufacturer's warranty.

Disposal

Please ensure the product and accessories are disposed of in compliance with the WEEE (Waste Electrical and Electronic Equipment) Directive and any other regulations applicable to your country. Always check with the environment agency and any other relevant authorities for current disposal regulations.

Declaration of Conformity

The Declaration of Conformity can be found on our website at <http://augustint.com/en/declaration/>

Customer Service:

You can contact us by phone on: +44(0)845 250 0586 (Carrier Rates Apply) or by email at: service@augustint.com should you require further technical support or customer service.

Quick Start Guide SE20







1. Before using for the first time, please ensure that the device is fully charged. Connect the mini USB lead the power socket and the other end of the USB cable to a powered USB port, and charge for 3 hours.
2. Set the time. Switch the unit on and press the **M** button to switch to clock mode indicated by the clock symbol in the top of the display, and the display dimming. Press “▶▶” to select Year/Month/Day/Hour/Minute in turn and adjust by pressing “▶▶” or “◀◀”. Press V- to switch between 12/24 hours.
3. Bluetooth. Press the M button until the display says "BLUE" and a short beep is heard. Scan for Bluetooth devices on your device and select "SE20". Press, or press and hold the “V+” or “V-” or buttons to change the volume up or down.
4. USB and SD card. When a USB device or SD card is inserted the SE20 will start playing MP3 format music from the USB or SD card. Press “▶▶” or “◀◀” button to change the track, or press and hold to fast forward or back through the current track. Press, or press and hold the “V+” or “V-” buttons to change the volume up or down.
5. FM Radio Search. Press the M button until the display shows the FM icon and frequency in MHz. To scan and search for the next higher or lower FM radio channel, press and hold either the “▶▶” or “◀◀” button. To scan and save all available FM radio channels automatically, press the “▶▶” button. After searching, you can select the saved channels by pressing the “▶▶” and “◀◀” buttons which are shown as P01, P02 etc.
6. Aux in. Connect the 3.5mm plug to the earphone socket of the external multimedia device and the mini USB to the SE20. Press the **M** button to change the mode until the display shows "AUX".
7. For any other queries, please telephone August International Ltd. helpline +44 (0) 845 250 0586, or email service@augustint.com

Contents

1. Safety Instructions	1
2. Main Features	2
3. Accessories	2
4. Part Names and Functions	2
5. Bluetooth Mode	4
6. USB/SD Card playing	5
7. Audio-In Mode	6
8. FM Radio Mode	6
9. LED light	7
10. Clock Setup	7
11. Specifications	9
12. Frequently Asked Questions	10
13. Warranty	11


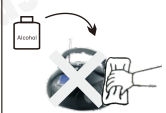
1. Safety Instructions

■ Storage and Use

	Keep this device away from extreme temperatures.		Keep the device away from wet or damp environments.
	Never expose the device to moisture, dust, oil or smoke.		Avoid dropping or exposing to impacts.
	When carrying this device as part of your luggage please ensure it is securely stored to avoid impact damage.		Never strike or scratch this device with any sharp object.

■ Maintenance

Please unplug all leads before cleaning this device.

	Wipe the device and buttons with a soft cloth.		Never wipe this device with an abrasive cloth or apply detergent, alcohol or chemical based cleaning products.
--	--	---	--

2. Main Features

 
- Play Music Wirelessly from Bluetooth Devices
- FM Radio with 12 Channel Presets
- Powerful 2 x 3W Stereo Hi-Fi Speakers
- Rechargeable lithium battery 800mAh
- 12/24 Hour Clock and Alarm Function
- Bluetooth V3.0

3. Accessories




4. Part Names and Functions

Top:

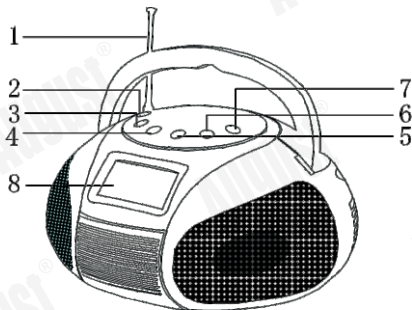

1. Antenna
2. Pause/Play
3. Volume Down
4. Previous
5. Next
6. Volume Up
7. Mode
8. LCD display

 Back:

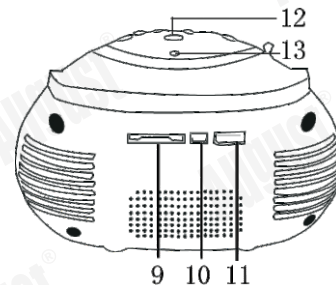

9. SD slot
10. AUX/DC 5V
11. USB slot
12. Power switch
13. LED light

5. Bluetooth Mode

To ensure you get the best performance from your Bluetooth Boombox, keep the distance between your Bluetooth Boombox and the sending device as small as possible and avoid placing your body or other objects in the signals path.

5.1 Pairing

5.1.1 Pairing with a Mobile Phone

1. Change to Bluetooth mode by pressing the M button until the display says "BLUE" and you hear a short beep, and the Bluetooth symbol appears at the top of the display.
2. Scan for available Bluetooth devices on your mobile phone (see your mobile phone user manual for instructions if needed).
3. Select "SE20" from the available devices.
4. Once successfully paired, the SE20 speaker will beep.

Note: Accessing Bluetooth settings on mobile phones varies for each phone. To find the information for your phone, please refer to its user manual.

5.1.2 Connect to a Windows PC

1. Change to Bluetooth mode by pressing the M button until the display says "BLUE" and you hear a short beep, and the Bluetooth symbol appears at the top of the display.
2. Enable Bluetooth on your PC.
3. Select "Devices and Printers" from the Control Panel and click "Add a Device".
4. Select "SE20" from the available devices to install drivers.
5. If the SE20 is not automatically set as your output device, select "Sound" from the control panel then highlight the SE20 and select "Set Default".

Note: For Windows XP and Vista, a third-party Bluetooth driver is needed (not included).

Note: When switched on the SE20 will automatically reconnect to the last paired Bluetooth device if it is in range. If this device is not available it will enter pairing mode automatically.

5.1.3 Music Playing Control

The SE20 is able to control the music playing on either a mobile phone or computer with a Bluetooth connection.

Press “▶▶” to pause or resume playing music.

Press “▶▶” or “◀◀” button to select the track you want.

Note: Music playing control is only compatible with devices that support A2DP. Please refer to your devices user manual for its A2DP compatibility.

6. USB/SD Card playing

If a USB or SD card is inserted when the product is switched on, it will play the MP3 format music from the USB or SD card. The track number will show for 2 seconds, then the music playing time will be shown on the LCD.

Press “▶▶” or “◀◀” button to change the track. Press and hold the “▶▶” or “◀◀” button to fast forward or back through the current track.

Press, or press and hold the “V+” or “V-” buttons to change the volume up or down.

Note: In the USB/SD mode, the USB or SD icon will show above the playing time.

7. Audio-In Mode

Connect the device to an external multimedia device through the AUX port by using the supplied accessory cable. Press the **M** button to change the mode until the display shows "AUX". The device will play audio from multimedia devices with a 3.5mm jack connection such as a PC, mobile phone, MP3 and MP4 players etc.

Note: In the AUX mode, the AUX icon will show above the time.

8. FM Radio Mode

When the SE20 is turned on it will start in FM radio mode automatically if there is no USB or SD card inserted. To scan and save all available FM radio channels automatically, press the "**►**" button. After searching, you can select the saved channels by pressing the "**►►**" and "**◄◄**" buttons. Up to 12 channels can be stored and will show on the display as P01, P02 etc.

To scan and search for the next higher or lower FM radio channel, press and hold either the "**►►**" or "**◄◄**" button.

Note: In FM radio mode, the FM icon and frequency will be shown on the display.

9. LED light

When switched ON and in USB/SD/FM/AUX/clock mode, the white light will stay lit. When entering Bluetooth and in pairing mode, the light will flash about twice a second, flash rapidly then go out when paired successfully but not playing, and flash every 2 seconds when playing.

The power icon will show for 5 seconds when switching to different mode, then it will not show until the power is low.

10. Clock Setup

10.1 Date time setting

Press the **M** button to switch to clock mode, then press the "**►**" button to select Year/Month/Day/Hour/Minute in turn. Adjust the digits by pressing "**►►**" or "**◄◄**", press and hold for continuous adjusting. Press the "**►**" button to finish the setting. Press **V-** to switch between 12 and 24 hour mode.

In clock mode, the year, month, day, hour and minute will be shown and the display backlight will be dimmer.

10.2 Alarm Settings

In clock mode, press and hold the **M** button to set or cancel the alarm function. When the alarm is set, the alarm clock symbol will be displayed. The SE20 must be switched on and in clock mode for the alarm to work.

Press and hold the "**►**" button again to enter alarm setting mode. Set up the hours by pressing the "**►►**" or "**◄◄**" buttons,

press and hold for continuous adjusting, then press “▶▶” to set up minutes in the same way. Press the “▶▶” button again to finish the setting.

The SE20 includes a snooze function. When alarm rings, press the “▶▶”, V-, “▶▶/◀◀” or V+ buttons to snooze, or press the M button to cancel the alarm. In snooze mode a "Zz" icon is shown next to the alarm clock icon. To cancel further snooze alarms press the “▶▶” button when the alarm is not sounding, and the "Zz" icon will disappear.

If not cancelled or snoozed, the alarm will sound for 1 minute. Snooze sounds every 5 minutes, and repeats three times.

10.3. SD card / USB / FM radio alarm function

In clock mode, and with the alarm function active so that the alarm clock icon is showing, press the V+ button so that the radio antenna icon shows in the display. The SE20 must be switched on and in clock mode for the alarm to work.

When the alarm time is reached, the SE20 will play the music from the USB or SD card if inserted, or will play the FM radio station if no USB or SD card is present. The alarm sound will not be activated at the same time.

When an SD card, USB or radio is used for the alarm, the music will continue to play and not stop after 1 minute.

The SE20 will remember the last track played or radio station listened to, and use this for the alarm sound if the alarm is set to use the SD card, USB or FM radio.

11. Specifications

LCD Display	1.8 inch
Bluetooth Specification	Bluetooth V3.0 + EDR
Speakers	2 x 3Watts
Frequency Response	80Hz – 18KHz
Separation	40dB(1KHz)
S/N	70dB
FM Radio Frequency	87.5 – 108.0MHz
USB and SD card port	Supports up to 16GB card or USB in FAT format
File format	mp3
Battery	Rechargeable Li-ion 3.7v 800mAh
Working Time	About 7 hours
Clock Standby Time	About 2 days
Charging Time	3 hours
Charging voltage	DC 5V
Dimensions	150 x 125 x 85mm
Weight	320g

12. Frequently Asked Questions

The questions listed below do not necessarily signify a fault with the device. Please check this list before requesting a repair.

Question	Possible Cause	Solution
Why is there no power?	Power adaptor plug loose	Check power adaptor plug connection.
Why can't I find the SE20 via Bluetooth	SE20 is not in Bluetooth pairing mode	Press M button to change Bluetooth mode, you will hear a reminder.
Why can't I pick up any radio stations?	No signal	Try repositioning the device or adjusting the antenna angle.
Why am I getting no sound?	The volume is too low or the playback is paused	Try to increase the volume of the SE20 and your source device or resume playback on your source device.

13. Warranty

This product is guaranteed for twelve months from the date of the original purchase. In the unlikely event of any defect arising due to faulty materials or workmanship, the unit will be either replaced or repaired free of charge (where possible) during this period. An alternative product will be offered in case the product is no longer available or repairable.

This warranty is subject to the following conditions:

- The warranty is only valid within the country where the product is purchased.
- The product must be correctly installed and operated in accordance to the instructions given in this user manual.
- The product must be used solely for domestic purposes.
- The warranty only covers the main units, and does not cover the accessories.
- The warranty does not cover the damage caused by misuse, negligence, accident and natural disaster.
- The warranty will be rendered invalid if the product is resold or has been damaged by inexpert repairs. The manufactures disclaim any liability for incidental or consequential damages.
- Please consult our customer adviser before returning any product; we are not responsible for any unexpected product returns.
- Any faulty product must be kept and returned in the original packaging with all the accessories and the original copy of the purchase receipt.

The warranty is in addition to, and does not diminish, your statutory or legal rights.

Customer Service:

Telephone: +44 (0) 845 250 0586 (Carrier Rates Apply)

Email: service@augustint.com

This product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The Declaration of conformity may be consulted online at <http://www.augustint.com/en/declaration>.



Industry Canada Statement

This device complies with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept interference, including interference that may cause undesired operation of the device.