

AUGUST[®] User Manual

**Wireless Presentation Laser Pointer with Mouse
Pointeur laser de présentation sans fil avec souris
Wireless Presenter mit Laserpointer und Maus
(LP109M)**

August International Ltd
United Kingdom
Telephone: +44 (0) 845 250 0586
Email: service@augustint.com
Web: www.augustint.com

Be sure to carefully read this user manual for proper guidance and keep for future reference.

Veuillez lire attentivement le mode d'emploi pour une bonne utilisation et conserver pour référence ultérieure.

Um das Gerät richtig zu bedienen, lesen Sie diese Anleitung bitte sorgfältig durch.

User Manual

1. Introduction

This wireless presenter is suitable for any presentation or PowerPoint occasion. With it, you do not need to stand beside your computer or have an assistant. It is very simple to use, just plug and play, and no driver is required.

The device enables you to control your presentation wirelessly up to 10 metres (32 feet) away, thanks to the advanced Radio Frequency (RF) technology that works through walls.

It combines the functions of a laser pointer, remote control and mouse. It is tailored as a convenient tool for presentations, teaching, meetings, speeches and training etc.

2. Operating system

The device supports Windows 98 / ME / 2000 / 2003 / XP / Vista / 7, Linux and Mac OS.

3. Parts & Functions

3.1 Front

1) Model (M1):



*Note: Blank screen and start slide functions are for PowerPoint only.

2) Model (M2):




3.2 USB Receiver



3.3 Back

Once the USB receiver is connected to a computer, it would normally detect the signal sent from the presenter automatically. If however it does not due to interference caused by other devices, press ID1 and ID2 at the same time to re-establish the connection.

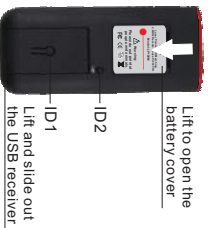

4. Battery Installation

- The units powered by 1 x CR2450 cell battery
- Remove the battery compartment cover
- Insert 1 x CR2450 cell battery into the battery holder
- Put the battery compartment cover back in position



Note:

- ① Do not insert the battery into the presenter in the wrong direction.
- ② Do not leave a bad or an exhausted battery in the presenter.
- ③ If you do not use the presenter for a long period of time, remove the battery to avoid possible damage from battery corrosion.
- ④ If the presenter does not function correctly or if the operating range becomes reduced, try to replace the battery with a new one.

5. Technical parameters

Presenter:

Technology	Radio Frequency
Frequency	2.4GHz
Control distance	Up to 10M
Laser distance	Up to 200M
Power supply	1 x CR2450 battery cell
Work voltage	1.5V
Laser wavelength	650nm
Laser power	< 5mW
Product size	105 x 44 x 15 mm (L x W x H)
Weight	45g

USB receiver:

Operating system	Windows 98 / ME / 2000 / 2003 / XP / Vista / 7, Linux and Mac OS
USB version	USB1.1 compatible with USB 2.0
Work voltage	4.5-5.5V
Size	54 x 21 x 9 mm (L x W x H)
Weight	10g

Caution

Please note that laser radiation is harmful to eyes. Do not look directly into the aperture while the laser is in operation!
Laser pointers can be harmful if used improperly. Please keep out of reach of children!

Note

Please note this instruction is only intended for reference. August International Ltd reserves rights to revise the product specifications, features and design without notice.