

August®

User Manual

LP310



August International Ltd
United Kingdom
Tel: +44 (0) 845 250 0586
www.augustint.com

- EN Wireless Presenter for Computer with Air Mouse
- FR Télécommande de Présentation Sans-fil pour Ordinateur avec Air Mouse
- DE Schnurloser Presenter mit Air Mouse
- IT Presentatore Wireless per Computer con Air Mouse
- ES Mando para Presentaciones con Air Mouse

User Manual

Thank you for purchasing the August LP310 Wireless Presenter for Computer. This user manual is designed to familiarise you with all the features of this device. Please take the time to read this user manual carefully, even if you are already familiar with a similar product.

Safety

To ensure the safety of you and others, please read the Safety Instructions before using this device. Please do not disassemble the product, it can be unsafe and will invalidate the manufacturer's warranty.

Disposal

Please ensure the product and accessories are disposed of in compliance with the WEEE (Waste Electrical and Electronic Equipment) Directive and any other regulations applicable to your country. Always check with the environmental agency and any other relevant authorities for current disposal regulations.

Declaration of Conformity







The Declaration of Conformity can be found on our website at <http://augustint.com/en/declaration/>

Customer Service

You can contact us by phone on: +44 (0)845 250 0586 or by email at: service@augustint.com should you require further technical support or customer service.


1. Safety Instructions

■ Storage and Use

	Keep this machine away from hot or cold places. Working temperature of this device is 0°C ~ 50°C, storage temperature is -10°C ~ 60°C.		Keep the Receiver away from water or damp environment.
	Never expose the receiver to moisture, dust oil or smoke.		Avoid dropping or exposing to impacts.
	Never put this machine in containers that are unstable as this may cause damage.		Never extrude or chafe this machine with sharp objects.

■ Maintenance

Please unplug all connection wires before cleaning this machine.

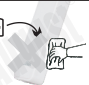	Please wipe this machine and buttons with a soft cloth. Only clean the screen with professional LCD TV screen cleanser.		Never wipe this machine with an abrasive cloth, detergent powder, alcohol and benzene etc. various propellants or chemical cleaning products.
---	---	---	---

■ Warning

1. Laser radiation
2. Class 2 laser product
3. Do not view directly with optical instruments
4. Do not point at people and animals
5. Please keep out of reach of children

2. Main Features

- Plug and Play for Computer Power Point Presentation
- Air Mouse and Red Laser
- Internal Storage for USB Signal Receiver
- Operating Range: up to 30m
- Compatible with Windows 98 / ME / 2000 / 2003 / XP / Vista / 7 / 8 / 10, Mac OS

3. Box contents



Wireless Presenter



Case




USB Power Cable



User Manual

4. Part Names and Functions

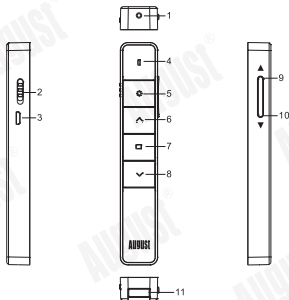

Air Mouse Mode

1. Laser Pointer
2. Power Switch
3. USB Power Port
4. Status LED
5. Laser / Double Press for Air Mouse Switch
6. Left Click
7. Print / Press and Hold for Pen (PowerPoint) / Double Press and Hold for Eraser (PowerPoint)
8. Right Click
9. Up / Press and Hold to Start/End Slideshow
10. Down / Press and Hold for Blank Screen (PowerPoint)
11. USB Receiver

Non Air Mouse Mode

1. Laser Pointer
2. Power Switch
3. USB Power Port
4. Status LED
5. Laser / Double Press for Air Mouse Switch
6. Up / Press and Hold to Start/End Slideshow
7. Tab / Double Press for Enter / Press and Hold for Alt + Tab
8. Down / Press and Hold for Blank Screen
9. Up / Press and Hold to Start/End Slideshow
10. Down / Press and Hold for Blank Screen
11. USB Receiver

Note: The status LED in Non Air Mouse Mode will be off when no keys are pressed. The status LED in Air Mouse Mode will be dimmed when no keys are pressed.

5. Operations

5.1 Windows Installation

Plug the USB receiver into your computer USB port. The system will automatically search for the new hardware and complete the installation.

Once installed the wireless presenter is ready to use.

Note:

In the event of your system failing to install the drivers, disable Windows firewall. Once disabled, launch an automatic driver update from your Device Manager.

5.2 MAC Installation

Plug the USB receiver into your computer USB port. The system will automatically search for the new hardware.

Upon first installation, Keyboard Set Assistant may appear and prompt that the keyboard cannot be identified.

Click Continue to finish the installation. The wireless presenter will then be ready to use.

5.3 Power Saving Mode

When the LP310 is switched on but not in use for a long time, the presenter will enter power saving mode. Press any key to wake the LP310 up and continue using it.

6. Charging

This device contains a built-in Lithium rechargeable battery. When the battery is low, the Status LED light will flash quickly when any button is pressed.

To charge the device, connect the LP310 to a powered USB port by using the provided USB power cable.

While charging, the status LED flashes slowly. Once fully charged the status LED will light constantly.

A full charge takes approximatively 1 hour.

7. Specifications

Presenter:

Technology	Radio Frequency
Frequency	2.4GHz
Control distance	Up to 30m
Laser distance	Up to 100m
Battery	3.7V/360mAh Lithium Battery
Sleep Current	30uA
Laser wavelength	650nm
Laser power	<1mW
Dimensions	125 x 22 x 13mm
Net Weight	38g (Excluding Receiver)

USB receiver:

Operating system	Windows 98 / ME / 2000 / 2003 / XP / Vista / 7 / 8 / 10, Mac OS
USB version	USB 2.0 compatible with USB 1.1, USB 3.0
Power Input	4.5-5V/500mA
Dimensions	19,5 x 12,5 x 5mm
Net Weight	2g

8. Troubleshooting

Problem	Solution
The presenter does not switch on	Please charge the presenter
Computer fails to install drivers	<ul style="list-style-type: none">● On Windows, verify that your firewall allows automatic driver updates. Turn off firewall temporarily if necessary.● On Mac, click Continue when the Keyboard Set Assistant error message appears.
Control Distance is decreased	<ul style="list-style-type: none">● Interference from other electronic devices can cause disruption and reduce control distance.● Low battery power can reduce the control distance. Please charge the LP310.
Does not seem to control of my software	The compatibility of the LP310 with software other than PowerPoint cannot be guaranteed

9. Warranty

This product is guaranteed for twelve months from the date of the original purchase. In the unlikely event of any defect arising due to faulty materials or workmanship, the unit will be either replaced or repaired free of charge (where possible) during this period. An alternative product will be offered in case the product is no longer available or repairable.

This warranty is subject to the following conditions:

- The warranty is only valid within the country where the product is purchased.
- The product must be correctly installed and operated in accordance to the instructions given in this user manual.
- The product must be used solely for domestic purposes.
- The warranty only covers the main units, and does not cover the accessories.
- The warranty does not cover the damage caused by negligence, accident and natural disaster.
- The warranty will be rendered invalid if the product is resold or has been damaged by inexperienced repairs. The manufacturer disclaims any liability for incidental or consequential damages.
- Please consult our customer adviser before returning any product; we are not responsible for any unexpected product returns.
- Any faulty product must be kept and returned in the original packaging with all the accessories and the original copy of the purchase receipt.

The warranty is in addition to, and does not diminish, your statutory or legal rights.

Customer Service:

Telephone: +44 (0) 845 250 0586

Email: service@augustint.com

This product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The Declaration of conformity may be consulted online at

<http://www.augustint.com/en/declaration>.

